
## HDANYWHERE

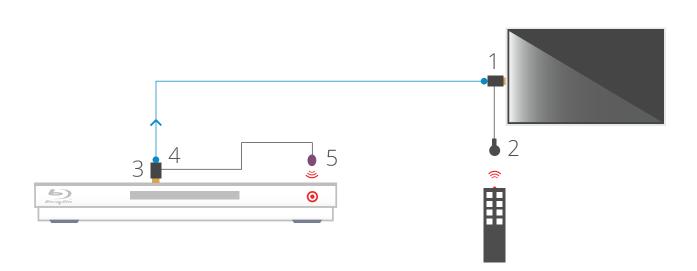

## IR over HDMI Injector Kit

- 1. Install the HDMI IR dongle between the HDMI input on the TV and your HDMI cable. Ensure that the switch is set to "IR". Plug the IR Receiver (see 'Pack Contents 2.') into the stereo jack input on the dongle (labelled RX).
- 2. Position the IR Receiver (see 'Pack Contents 2.') with clear line-of-sight to the remote.
- 3. Install the HDMI IR dongle betwen the HDMI input on the source and the HDMI cable, similarly to point 1. Again, ensuring that the switch is set to "IR".
- 4. Plug the IR Transmitter (see 'Pack Contents 1.') into the stereo jack input on the dongle (labelled RX on the dongle).
- 5. Position the IR transmitter (see 'Pack Contents 1.') with clear line-of-sight to the remote receiver on the source.

## Pack Contents

- 1. IR Transmitter
- 2. IR Receiver
- 3. IR Dongle (both labled RX)

